

Light Year 1-Pitching Instructions

In order to familiarize yourself with your new tent, we recommend you "test pitch" it before embarking on your wilderness adventure. For more helpful tips, go to www.sierradesigns.com/tents.html




Package Includes: Tent Body, Rain Fly, 2 Poles, 2 Guy Cords, 7 J-stakes, 1 Pole Sack with stake pocket.



Step 1: Find an even piece of ground, stake out your tent and assemble the poles. Be sure the longer pole set is at the front of the tent for a quick pitch.

Step 2: Making sure the Non-rotating Elbows™ with H-Clip™ are facing in towards the body of the tent, insert the Ball Connectors™ at the ends of the poles into the tent's Jake's Foot™ attachments.

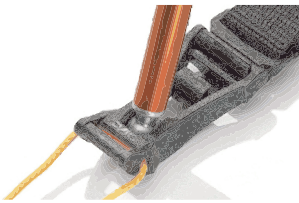

Jake's Foot™



Non-rotating Elbow™



Ultralight Clip™



Jake's Foot™ Fly Attachment



Step 3: Connect the front and back H-Clips™ to the Non-rotating Elbows™, then connect the remaining Ultralight Clips™ to the poles.

Step 4: Lay the rain fly over the tent and connect the small side-release buckles on the back and front of the tent. Next secure the rain fly to the front bar of the Jake's Foot™ attachment, stake out the vestibule and admire your new tent.