

Zolo 1, 2 & 3-Pitching Instructions



In order to familiarize yourself with your new tent, we recommend you "test pitch" before embarking on your wilderness adventure. For more helpful tips, go to www.sierradesigns.com/tents.html



Package Includes: Tent Body, Rain Fly, 1 Hubbed Main Pole, 1 Ridge Pole, 6 (5 Z1) Tent Stakes, 4 (2 Z1) Guy Cords, 1 Pole Sack & 1 Stake Sack.



Step 1: Find an even piece of ground, stake out your tent and assemble the poles. Snap ridge pole in C clip of hub. Position the ridge pole over the doors for a quick pitch.




Jakes Foot™



Swivel HC Hub™



Step 2: Making sure that the H-Clip™ on the bottom side of the Swivel Hub™ is facing down, insert the pole tips into the Jakes Foot™ at each corner of the tent.

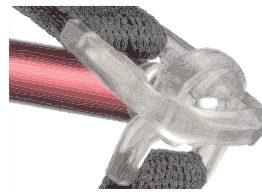

Ball Cap™ with SQ Ring™



Jakes Foot™ w/rain fly clip



Step 3: Starting at the center of the tent, connect the H-Clip™ to the bottom side of the Swivel Hub™. Next attach the ridge pole to its corresponding Ball Cap™ connectors located over the doors. Then work your way around the tent securing the remaining RCT Swift Clips™ to the tent poles.



Step 4: Locate the SQ Rings™ on the underside of the rain fly and attach them to the Ball Cap™ assembly located at the ends of the ridge pole. Attach the rain fly to each Jakes Foot™ using the clip on the fly. Stake out the vestibule(s) and admire your new tent.